
DUALTRON

FOREVER

Personal Mobility

PRODUCT MANUAL



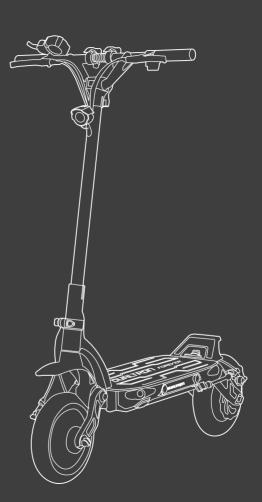




Scan the QR code to download the latest user materials and obtain the latest updates and safety instructions.




The dream of electric technology.

Pictures for reference only, subject to our existing products.



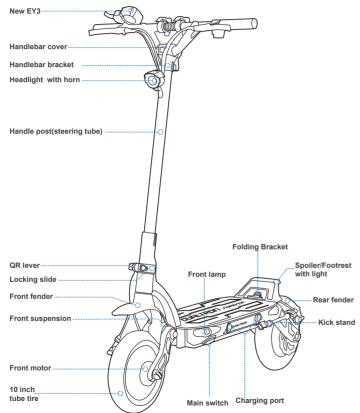



Name	Function	Operation method
≣□ Headlight button	Turn on/off headlight	Press the light button, turn on/off the headlight.
Turn Signal Button	Turn on/off the left/right signal	Press the left/right side of the Turn Signal Button, the left/right turn signal will keep blinking.
Horn Button	Turn on the horn	Press the Horn Button, the scooter will beep once.
Power button	Turn on/ off power	1.Press and hold the Power button to turn on/off the scooter. 2.Press the button to adjust the speed gear.
Set button Settings		1.Press and hold the Set button to enter/exit ECO mode. 2.Press the button to switch battery voltage/percent indication
Mode button Mode selection		Press and hold the Mode button to enter/exit the mode setting, and automatically return to the main interface after 30s. Press the the Mode button to switch TRIP/RANGE/ODO.
Accelerator	Speed up	Pull the throttle to accelerate.



	Item	Parameter		
Product	Model	Dualtron Forever long body	Dualtron Forever ltd	
	Battery Capacity	60V18.2Ah CN	60V24Ah CN	
Battery	Range	60km	80km	
	Charging Ambient Temperature	0 to 40°C (Battery temperature exceeds 55°C,BMS start protection program.)		
	Battery Management System	Over-heating, short circuit, over-current, over-discharge and over-charge protection		
	Max. load	120kg		
Rider	Recommended Age	16–60 years old		
	Required Height	3'11" -6'6" (120-200 cm)		
Display	Туре	NEW EY3 display(DUALTRON APP available)		
Motor	Motor Type	BLDC Hub Motor		
1-10101	Nominal Power	900Wx2		
Machine	Net Weight	Around 24.5kg	Around 27Kg	
	Max. Slope	Around 36.4%[20°]		
	Drive System	Dual motor drive		
	Speed	25km/h		
	Length × Width × Height	1220mm×620mmx1250mm		
	Folded: Length × Width × Height	1220mm×620mmx525mm		
	Wheelbase	Approx.920mm		
	Ground Clearance	Approx.170mm		
	Traversable Terrain	Asphalt/flat pavement; obstacles < 5 cm; gaps < 5 cm		
	Operating Temperature	-5 to 45°C		
	Storage Temperature	-20 to 50°C		



Brake	Machine Brake	Wire disc brake
	Electric Brake	ABS&EBS (Indicating the battery temperature exceeds 55°C,BMS start protection program,ABS/EBS fails.)
Charger	Input Voltage	100-120V/200-240V~
	Max. Output Voltage	66.4V1.75A
Tire	Туре	10 inch tube tire
	Tire Pressure	50 psi
	Material	Rubber
Suspension	Туре	F&R rubber suspension cartridge (replaceable)
	Optional	(Default) Softest Medium soft Medium Medium hard Hardest


*Disclaimer: this is not a legal opinion or legal advice. The information provided herein (including in the App) is for your convenience and information purpose only. It is not intended to cover every piece of law and/or regulation that may be applicable to this product. DUALTRON explicitly hereby disclaims any and all warranty and/or representation, express or implied, related to completeness, accuracy, up-to-date of such information. DUALTRON reserves the right but not obligation to correct, implement and/or update the information. You shall use the information at your own risk. It is your sole responsibility to learn and understand any and all the law and/or regulation, requirements, prohibition, restriction and/or limitation imposed by either law, government authority, court, private party or the others that may apply to your use of this product.

^{*}Theoretical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 25 km/h on average on pavement.

^{*}Typical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 50 km/h on average on pavement. (Some of the factors that affect range include speed, number of starts and stops, ambient temperature, etc.)

^{*}Max.Speed: tested while riding with a full battery,75kg load,25°C,straight road on flat road with no wind. (Some environmental factors can affect max speed,uneven roads, crooked roads, temperature, wind, etc.)



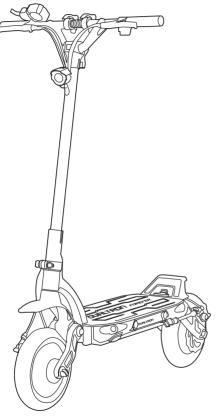

Accessories





Battery charger x1

Manual





Screw Cap x 2

Multitool x 1

Bluetooth Connection

APP Download Guide

Method 1





- 1.Scan the QR code to download the APP.
- 2. Choose the mobile phone system that suits you to install, and register / log in.

Download on the APP Store ANDROID APP ON


Google play

1.Search "DUALTRON" in the application and download it, and register / log in.

Pair the Bluetooth on the APP




Power on the scooter.

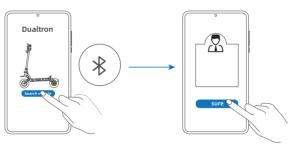


Click "Search vehicle" and pair with your scooter. * The scooter is connected to the Dualtron app when the Bluetooth symbol lights up. Select "bind as owner".

(No one else can connect, only people authorized by you are allowed to connect. Authorizations are created on the app.)



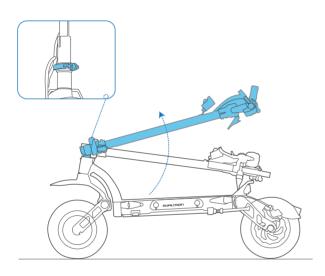


① Release the QR lever,raise the locking slide upwards, raise the steering tube, then lower the locking slide downward.
② Tighten the finishing screw properly to lock the QR lever so that the locking slide is firmly fixed in any direction, and check for looseness during use.

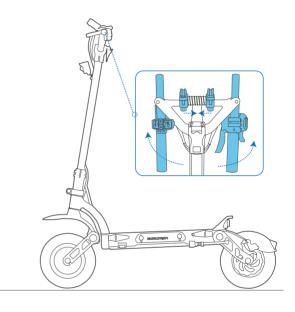

① Loosen the QR lever, pull the locking slide inward and raise the handlebar, then close the QR lever and tighten the set screw.
② Align the locking slide with the safety line and lock it so that it is firmly fixed with the QR lever. Always check for looseness during use.



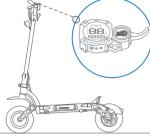

1. Power on the scooter and choose the speed mode. * Please choose the speed mode before riding! Note: Speed mode can be choose via the Dualtron app.



4. Slow down by releasing the throttle and squeezing brake levers.




2. Stand on the footboard with one foot and push off with the other foot to start gliding. *Make sure you have disabled SAFE mode. (SAFE mode setting via Dualtron app. Deactivate safe mode by squeezing brake lever.)



 To turn, shift your body and turn the handlebar slightly.
 * Please watch out for road conditions.

* Please watch out for road conditions, sufficient turning space is required.

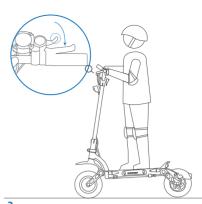


3. Put both feet on the footboard and stand stably. Pull the throttle to speed up.




 \triangle

When hard braking, serious danger or injury may occur. Maintain a moderate speed and look out for potential hazards.




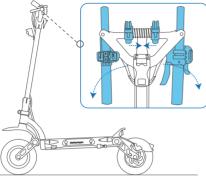

Loosen the QR lever, push the locking slider inward and fold the handlebars down.

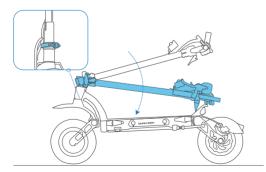


Lay the steering tube down while raising the locking slide.

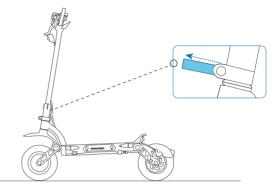

Loosen the QR lever and move the locking slide upward.

You must hold the steering tube with your hand to prevent falling down and hitting.

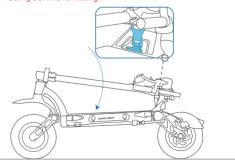

Lock the handlebar hook to folding bracket.

Ensure that lock the handlebar when lift scooter.

