


Personal Mobility
PRODUCT MANUAL



Model No.: DD2306

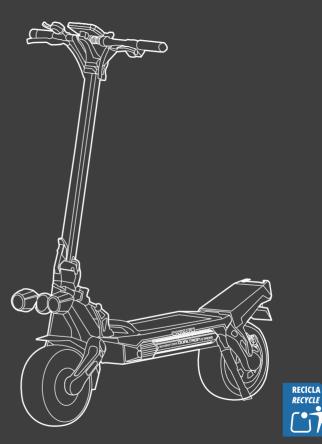

Scan the QR code to download the latest user materials and obtain the latest updates and safety instructions.





The dream of electric technology.

Pictures for reference only, subject to our existing products



Diagram And Functions

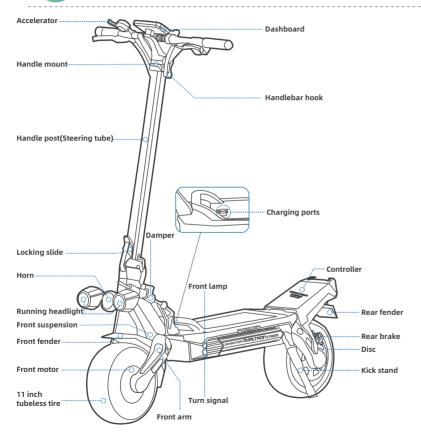



Name	Function	Operation method
	Turn on/off the left/right signal	Press the left/right side of the Turn Signal Button, the left/right turn signal will keep blinking.
Headlight Button	Turn on/off the headlight	Press the Headlight Button, the headlight is on;Press it again,the headlight is off.
Horn Button	Turn on the horn	Press the Horn Button, the scooter will beep once.
Warning Light Button	Turn on the warning light	Press the Warning Light Button,the left&right signals will keep blinking until press the Warning Light Button again.
Ambient Light Button	Turn on/off ambient light	Press the Ambient Light Button, turn on/off both sides of ambient light.
Accelerator	Speed up	Pull the throttle to accelerate.



	Item	Parameter
Product	Model	Dualtron New-storm
Battery -	Battery Capacity	72V35Ah(LG or Samsung)
	Range	110km
	Charging Ambient Temperature	0 to 40°C (Battery temperature exceeds 55°C,BMS start protection program.)
	Battery Management System	Over-heating, short circuit, over-current, over-discharge and over-charge protection
Rider	Max. load	120kg
	Recommended Age	16–60 years old
	Required Height	3'11" -6'6" (120-200 cm)
Display	Туре	EY4 LCD Bluetooth Display(Ability to connect to DUALTRON APP)
Motor	Motor Type	Motor module,separated from motor cable,easy fixing
	Nominal Power	2200W*2
Machine	Net Weight	49.7kg
	Max. Slope	Around 70%(Around 35°)
	Drive System	Dual motor drive
	Speed	25km/h
	Length × Width × Height	1240×680×1300mm
	Folded: Length × Width × Height	1240×330×610mm
	Wheelbase	Approx.960mm
	Ground Clearance	Approx.190mm
	Traversable Terrain	Asphalt/flat pavement; obstacles < 5 cm; gaps < 5 cm
	Operating Temperature	-5 to 45°C
	Storage Temperature	-20 to 50°C



Brake	Machine Brake	Hydraulic brake
	Quantity Of Pistons	4-pistons
	Electric Brake	ABS&EBS (Indicating the battery temperature exceeds 55°C,BMS start protection program,ABS/EBS fails.)
Charger	Input Voltage	100-120V/200-240V~
	Max. Output Voltage	83V 1.4A
Tire	Туре	11 inch tubeless tire
	Tire Pressure	50 psi
	Material	Rubber
Suspension	Туре	Front and rear adjustable cartridge(patent)
	Optional	*Change the thickness of the gasket to obtain different shock absorption effects.


*Disclaimer: this is not a legal opinion or legal advice. The information provided herein (including in the App) is for your convenience and information purpose only. It is not intended to cover every piece of law and/or regulation that may be applicable to this product. DUALTRON explicitly hereby disclaims any and all warranty and/or representation, express or implied, related to completeness, accuracy, up-to-date of such information. DUALTRON reserves the right but not obligation to correct, implement and/or update the information. You shall use the information at your own risk. It is your sole responsibility to learn and understand any and all the law and/or regulation, requirements, prohibition, restriction and/or limitation imposed by either law, government authority, court, private party or the others that may apply to your use of this product.

^{*}Theoretical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 25 km/h on average on pavement.

^{*}Typical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 50 km/h on average on pavement. (Some of the factors that affect range include speed, number of starts and stops, ambient temperature, etc.)


^{*}Max.Speed: tested while riding with a full battery,75kg load,25°C,straight road on flat road with no wind. (Some environmental factors can affect max speed,uneven roads, crooked roads, temperature, wind, etc.)



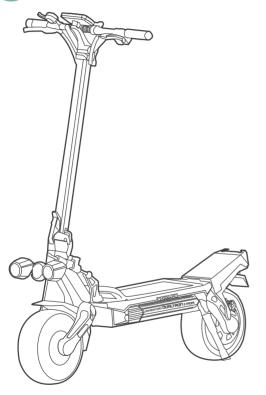

Accessories





Multitool x 1

Battery charger x1




Manual




Folding Bracket



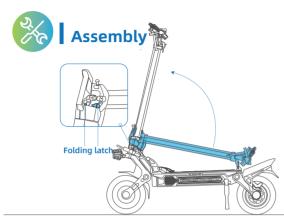


① Raise the steering tube and make sure the folding latch gets into the button correctly.


(Carefully, if the folding latch gets into the button incorrectly, the steering tube will fall

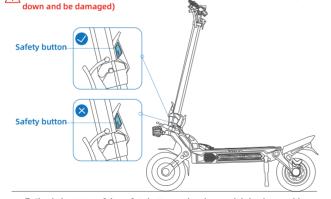

 $\ensuremath{\mathfrak{B}}$ Check the status of the safety button and make sure it is back to position.

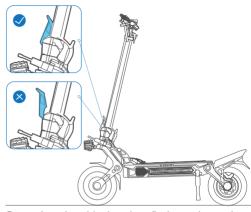

② Press down the quick release lever firmly to make sure the folding mechanism is tightened.

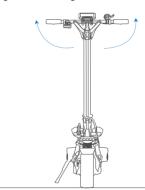

④ Place the locking slide up to the safety line and lock it so that it is firmly fixed with the QR lever. Always check for looseness during use.



APP Download Guide








- 1.Scan the QR code to download the APP.
- 2. Choose the mobile phone system that suits you to install, and register / log in.




 Search "DUALTRON" in the application and download it, and register / log in.

Pair the Bluetooth on the APP

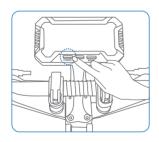

Power on the scooter.

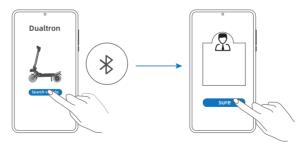

Click "Search vehicle" and pair with your scooter. * The scooter is connected to the Dualtron app when the Bluetooth symbol lights up. Select "bind as owner".

(No one else can connect, only people authorized by you are allowed to connect. Authorizations are created on the app.)




1. Power on the scooter and choose the speed mode. * Please choose the speed mode before riding! Note: Speed mode can be choose via the Dualtron app.



4. Slow down by releasing the throttle and squeezing brake levers.



2. Stand on the footboard with one foot and push off with the other foot to start gliding. *Make sure you have disabled SAFE mode.(SAFE mode setting via Dualtron app.Deactivate safe mode by squeezing brake lever.)



5. To turn, shift your body and turn the handlebar slightly.

* Please watch out for road conditions, sufficient turning space is required.




3. Put both feet on the footboard and stand stably. Pull the throttle to speed up.




 $\underline{\mathbb{N}}$

When hard braking, serious danger or injury may occur. Maintain a moderate speed and look out for potential hazards.




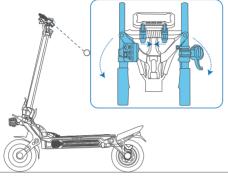

Slide the folding handle lock out of positon and inward. Fold the handlebars.

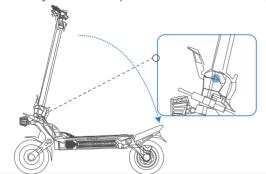

Press the both folding latches, and then fold the steering tube (When pressing the safety latch, you must hlod the steering tube with your hand to prevent falling down and hitting.)

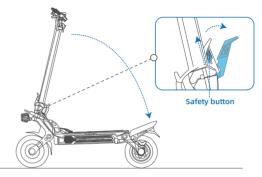

Slide the safety button up and open the quick release lever.



Lock the handlebar hook to the footrest.

(Ensure that lock the handlebar when lift scooter)

